

TAPE HEAD REFURBISHMENT PROGRAM

THE TAPE HEAD REFURBISHMENT PROGRAM IS EXPLAINED STEP-BY-STEP BELOW:

01 TAPE HEAD RECEIVED BY BESTPACK



02 TECHNICIANS DETERMINE WHETHER TIER 1, 2, OR 3, HEAD



03 SIMPLE FIXED TIER PRICING FOR AN INSTANT QUOTE



04 TAPEHEAD SENT OUT WITHIN 1 DAY OF ORDER



WHAT TIER AM I IN?

Not sure what tier you're in? Take a look at our Tier Guide below and find out.



AC Tape Head Shown

TIER 01

A tape head that needs normal wear and tear items replaced. These parts include rubber rollers, blades, springs, and bumpers. Everything is still intact and working properly.

\$\$\$ HIGH DISCOUNT



AC Tape Head Shown

TIER 02

A tape head that needs more attention than the **Tier 1**. This tape head will require the same parts as **Tier 1** plus the mandrel, one way roller, and idle roller. There may be minor structural damage which could include bent brackets.

\$\$\$ MEDIUM DISCOUNT



AC Tape Head Shown

TIER 03


A tape head that needs all the parts replaced in **Tier 1** and **Tier 2** plus there will be major structural damage. The structural damage could include bent or broken brackets and/or shafts. Assemblies or parts may be missing.

\$\$\$ LOW DISCOUNT

TAPE HEADS ELIGIBLE FOR THE REFURBISHMENT PROGRAM*




BestPack Standard
AC TAPE HEAD

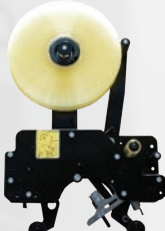

BestPack Universal
BP TAPE HEAD



Made for the ATFXU Sealer
TH TAPE HEAD

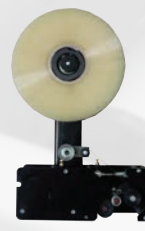

Made for 1-Edge Sealers
PT TAPE HEAD



BestPack Stainless
AC TAPE HEAD

*Pricing may vary depending on tape head model.